



b.note

v2.3.0

**Instruction Manual
(2022-02-14)**

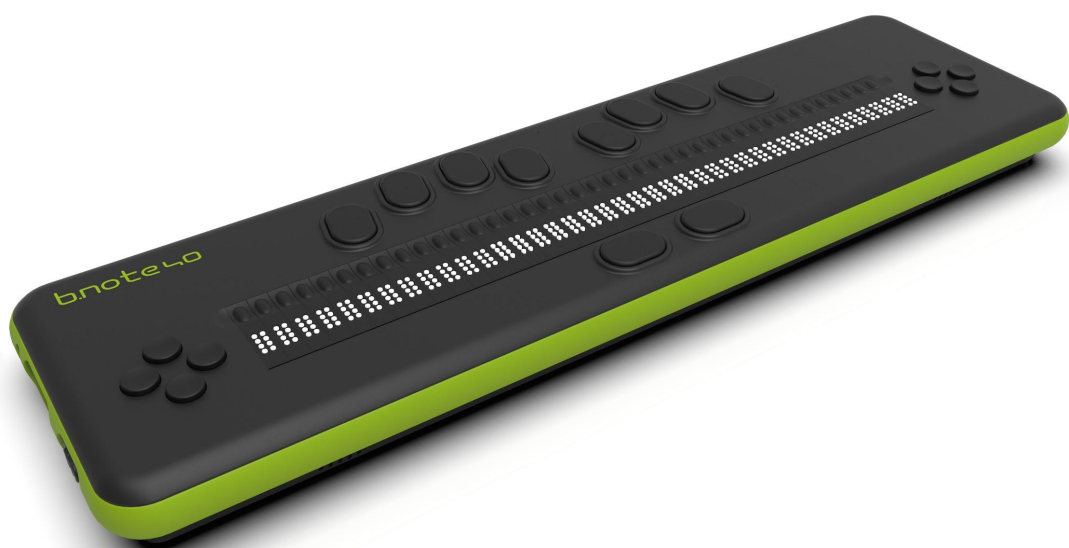


TABLE OF CONTENTS

Description	7
Introduction	7
Features	8
Hardware architecture	8
The b.note keys	9
The On/Off power button	9
The control keys	9
The routing cursor keys	9
The braille keyboard	10
Start Up	10
Use of a menu	11
Use of a dialogue box	11
The main menu of b.note	12
USB-A and USB-B	12
Bluetooth-applications	12
nn%	12
The Applications menu of b.note	12
USB	12
Document (0 to 5)	12
Bluetooth (0 to 4)	13
Explorer	13
Settings	13
Transport	13
Turn Off	13
The applications	13
Introduction	13
The file explorer	13
Introduction and moves in the current directory	14
Multiple selection	14
Trash	15
File explorer menu	15
File menu	15
Edition menu	15
Go to menu	15
Back-up menu	16
Applications button	16
Special bluetooth and back-up files menu	16
Trash menu	16

File menu	16
The editor	17
The editor's menu	17
File	17
Edition	18
Math	18
Search	18
Insertion	18
Bookmarks	19
Vocalisation	19
Applications button	19
Settings	20
Details of the settings	20
Clock	20
Battery	20
Vocalisation	20
USB	21
Bluetooth	21
Wifi	21
User interface	21
Editor	22
Math	22
Keyboard	22
Routing cursor keys	23
Standby	23
Test (menu only)	23
Reset (menu only)	23
Versions	23
The Audio Players	23
Audio	24
Audio Player menu	24
Playlist menu	24
Element menu	24
Player menu	24
Radio	24
Radio player menu	25
Radio menu	25
Player menu	25
The games	25
Minesweeper	25
Rules of the game	25
Display and movements	25

Mastermind	26
Rules of the game	26
Display and movements	26
Diary	26
Basic operation	26
App browsing	26
Calendar mode	27
The event menu	27
Goto menu	28
Find menu	28
DIARY MANAGER	28
Diary settings	28
b.note with a screenreader	30
USB	30
Bluetooth	30
APPENDIX - Editor - Search	31
APPENDIX - Editor - Math.	31
Description	31
Math UEB language (Unified English Braille)	31
Generalities	31
Numbers	32
Constants	32
Blocs	32
Operators	32
One argument functions	33
Multi arguments functions	33
Examples	34
Math computer braille language	36
Generality	36
blocks	36
constants	36
operator	37
one argument functions	37
Several arguments functions	38
APPENDIX - USB braille keyboard	40
APPENDIX - Unimanual braille keyboard	41
APPENDIX - Functions of the routing cursor keys	42
APPENDIX - Bluetooth pairing	43
Pairing with a PC	43

Pairing with a tablet or an Android smartphone	43
Pairing with an Apple tablet or smartphone	43
APPENDIX - Bluetooth file transfer	44
Transfer from PC to b.note	44
Transfer from b.note to PC	44
Transfer from an Android tablet (or smartphone) to b.note	45
Transfer from b.note to an Android tablet (or smartphone)	45
APPENDIX - Controller keyboard shortcuts	46
Left keypad functions	46
Right keypad functions	46
APPENDIX - Braille keyboard shortcuts	47
General	47
Menu / Dialogue box	47
Editor	47
File explorer	48
Audio Player	48
Radio	49
APPENDIX - 8-dot computer braille characters (US)	49
APPENDIX - 10 dots braille functions	53
APPENDIX - Applications updates	55

Description

b.note is a refreshable braille display that can be connected to multiple devices via USB and Bluetooth such as computers, tablets or smartphones.

b.note is also a stand-alone braille notetaker and computer that includes a file explorer and an editor to organize, read and modify your documents, a scientific calculator, a MP3 reader, a web radio and podcast player.

Introduction

Upper side :

- Braille display available in 20 or 40 cells (8 dots for each cell),
- Routing cursors with a double-contact function, located above each braille cell,
- A keyboard of 10 keys – 8 keys above the routing cursor line and 2 keys below the braille display for thumbs,
- 2 keypads of 4 buttons, each keypad located on both sides of the braille display.

Bottom side :

- A trap screwed to the device gives access to the SD Card. For service only.
- On *b.note* 2nd generation, 2 grills located in the front of the housing will allow 2 integrated speakers to transmit sound.

Left side :

- A small hole enables the use of a paper clip if the system needs to be reset due to malfunction,
- A USB port 'C' type necessary for device charging or connecting to another system,
- An audio jack socket (3,5mm) to plug headphones,
- Switch on/off key lock.

Back side :

- On *b.note* 2nd generation, a USB port will allow the user to plug a USB stick for files transfer.

Features

- 20 or 40 braille cells
- 20 or 40 routing cursors
- 10 keys braille keyboard
- 2 keypads of 4 buttons
- Processors : STM32L1 / ARM Cortex-A53, quad core, 1.4GHz,
- RAM: 512MB LPDDR2 (900MHz),
- SD Card 64GB,
- Wifi : 2.4GHz 802.11ac dual band,
- Bluetooth : 4.2 LS BLE,
- Audio out : Jack 3,5mm and integrated speakers (*b.note* 2nd generation),
- USB type A for USB stick (*b.note* 2nd generation),
- USB type C for power supply or connection to a computer,
- Battery : 3.7V 6000mAh (22.2 W),
- Fast charge with external power supply adaptor USB C (protocol PD Universal 2.0),
- Charge at 30% in 25 min., 80% in 1h30.
- Battery life : more than 14 hours
- Dimensions : 235 (20 cel.) / 365 (40 cel.) x 105 x 27 mm,
- Weight : 500 gr. (20 cel.) / 600 gr. (40 cel.).

Hardware architecture

b.note is a dual processor system,

It includes a 32-bit microcontroller that manages :

- Power supply system
- The keyboards
- On/Off power button
- USB port,

As a USB braille display, this processor will ensure the good operation of the device.

For the other uses of *b.note*, a second more powerful processor features :

- Bluetooth,
- Internal applications (files explorer, note-taker, media player)
- Speech synthesis

In needed cases, the second processor switches on. The power supply from the second processor will stop working once the device is turned off (press and hold the power button).

The *b.note* keys

The On/Off power button

The On/Off power button is a key lock that needs to be pulled to be activated. It allows the device to switch On or Off. A short press leads to “transport” mode. A long press (> to 2 sec.) leads to “stand by” mode. (See “Start up”)

The control keys

b.note is equipped with 2 sets of 4 buttons (keypad of 4 arrow keys)

Functions of the left keypad :

- Press the up arrow key to open the *b.note* menu,
- Press the down arrow key to enter or exit the current application menu,
- Press the right arrow key to move forward on the braille display,
- Press the left arrow key to move backward the braille display.

Functions of the right keypad :

The 4 buttons are used to simulate the arrow keys. For example, in the menus, the right and left arrow keys enable the selection of the next or previous element of the menu.

A detailed description of the functions of the control keys can be found in chapter “APPENDIX - Controller keyboard shortcuts”.

The routing cursor keys

The routing cursor keys have a double-contact function : a light click on any routing cursor key triggers the first contact, a stronger click will trigger the second contact.

By default, the routing cursor keys functions are the following :

- A light click on the first routing cursor key moves the braille display backward.
- A light click on any routing cursor key moves the braille display forward. When finished reading, the user does not have to look for any particular button or key, he/she presses any routing cursor key to move forward to the next display.
- A stronger click is needed to use the routing cursor key as its usual purpose, like action on an object or positioning the cursor on a text.

The functions assigned to the routing cursor keys can be changed (see APPENDIX “Functions of the routing cursor key”).

The braille keyboard

The braille keyboard of *b.note* is composed of 8 keys and 2 thumb keys. Each key is related to one braille dot.

This is how each key is positioned : '7 3 2 1 4 5 6 8'

The 2 thumb keys are named from left to right : '9' and 'A'.

The braille keyboard must be used by pressing and releasing simultaneously one or several keys. The functions or characters generated according to the combination of pressed keys will be detailed later in the document :

- For computer braille, see APPENDIX “8-dot computer braille characters”,
- For the other functions (different from usual characters you may find on a PC keyboard) see APPENDIX “10 dots braille functions”
- In order to use the braille keyboard in unimanual mode, see APPENDIX “Unimanual braille keyboard”.

You might have to use some of these modifying functions (Ctrl, Alt, Shift, Windows and Insert) before typing the keys combination that these functions apply to.

Start Up

The sliding button, located on the left side of the device, needs to be pulled in order to start *b.note*.

The braille display will switch on and will display the main menu.

Once the device is “on” :

- A short press turns the device into “transport” mode. In this case, all keys stop working and all dots on the braille display are down.
- A long press (> to 3 sec) turns the device into sleep mode. The second processor power supply is cut off as well as the braille display.

After starting up, *b.note* will display the main menu:

“usb-a usb-b bluetooth-applications nn%”

Choose “usb-a” or “usb-b” to communicate with a computer through the usb cable on one of the 2 serial port emulations. If another internal app or Bluetooth mode is requested, “bluetooth-applications” will have to be confirmed which will start the second processor of the system.

nn% indicates the percentage of the remaining battery power.

In order to return to the main menu of *b.note*, press the up arrow key of the left keypad.

Once the second processor starts, the main menu is complete :

“usb-a usb-b <List of connected bluetooth channels> <list of documents in editing> explorer settings transport turn off”

Use of a menu

A menu appears as a line of labels.

These labels can be made of several words, in this case the braille dot 8 replaces the space as a word delimiter.

The first label is the menu title, followed by the character “.”

The followed labels are operable buttons separated with spaces.

The braille dot 7 and 8 blink below the first character of the button, meaning the button is focused.

A focused button is activated when pressing 9A from the braille display.

As a shortcut, the buttons of the menus can be activated by typing the shortcut letter when the menu is displayed. The shortcut letter is displayed by the braille dot 8 up and blinking.

When opening a menu, the beginning of the braille display shows the focused object.

There are 2 methods to navigate throughout a menu :

1. You can either move forward or move backward the braille display on the menu (light click on the routing cursor key, or right and left arrow of the left keypad), then activate one of the buttons of the menu with a stronger click on the routing cursor key located above this button.
2. You can move the marking on the different buttons of the menu (left/right arrow of the right keypad). The focused button is located at the beginning of the braille display, therefore you can activate this button (9A of the braille keyboard).

Use of a dialogue box

A dialogue box shows a list of objects with different values associated, some of these values can be editable.

A dialogue box is like a menu and can be used the same way. There is a “OK” button to confirm and close it and a “Cancel” button to cancel the modifications. This “Cancel” button is displayed only when modifications are possible in the dialogue boxes.

Just as for the menus, the blinking dots 7 and 8 show the focused element, the raised dot 8 indicates the shortcut letter that will be activated by typing Alt+letter (on the braille keyboard 8A + braille combinaison of the letter).

Besides the buttons, you may find in a dialogue box :

- text object
- editable object
- liste object

“Editable” objects and “list” objects have a name and values associated. They are displayed as “name-value” forms.

“Text” objects have only an informative purpose, any action has no effect. They have no value and will display as “name” form.

Editable objects will enable the modification of a value. Any keyboard action on an editable box will display a blinking braille dots 7-8 under each character to mark selected text. Any character typed on the braille display will replace this value. An action on the editable box will shut editing mode.

The list objects will permit the selection of a value in a defined list, the list will have to be focused and the values, with up/down arrow keys from the right keypad, scrolled.

The main menu of *b.note*

Two menu versions exist according to the second processor whether it is On or Off. This chapter describes the first version of the main menu, then the Applications menu in the second version.

USB-A and USB-B

These two buttons permit the use of *b.note* as a braille display connected via USB serial port.

In this mode, any keyboard action on the keys is sent to the connected device, and the braille display will be refreshed when needed.

Bluetooth-applications

This button will enable you to enter the different applications of *b.note*, which will start the second processor. 20 seconds later, the main menu becomes the Applications menu.

nn%

This last element indicates the battery power.

The Applications menu of *b.note*

This menu replaces the main menu when the second processor has started.

USB

same purpose as the previous menu.

Document (0 to 5)

These buttons go back to an open document, the text's name of these buttons is the same as the file name.

If no document is being edited, there will not be any button in the menu.

Bluetooth (0 to 4)

The number of the buttons will depend on the number of Bluetooth connections, the text related to these buttons is the name of the Bluetooth system that *b.note* is connected to.

These buttons will allow the connection of the keyboard and the braille display *b.note* to the Bluetooth system (PC, tablet or smartphone).

If no Bluetooth connection is activated, there is no button of this kind in the menu.

Explorer

This button allows the user to launch the file explorer application (See chapter Applications>File explorer).

Settings

This button allows the user to launch the settings 'application (See chapter Applications>Settings).

Transport

Same use as the short press on the On/Off switch of the device (See chapter Start Up).

Turn Off

Same use as the long press on the On/Off switch of the device (See chapter Start Up).

The applications

Introduction

The applications of *b.note* are made of a file explorer, an editor, a settings page.

An Audio application will allow the creation of a playlist to launch audio files.

A Radio application will allow the selection of a radio station and listen to it.

A minesweeper game and a mastermind game can be activated on the "games" parameter from the preferences section. By default, these 2 applications are not visible.

The file explorer

The files explorer presents a list of files and directories included in the current directory. This current directory is the same as "My documents" from *b.note*, it can change according to the user's operation.

In order to index the different documents, the files explorer has features that will enable it to create/erase subfolders and make copies or operate “directory to directory” transfer.

The files can be exchanged by bluetooth with a PC or smartphone or with an USB stick plugged on the USB port. The files explorer can zip and extract archives in zip format. The explorer has its own menu, see details below.

Introduction and moves in the current directory

The directories and files from the current directory are indexed by alphabetical order. Each element of this directory relates to a braille line, use the up or down arrow key of the right keypad to navigate throughout this list.

Action on a directory opens it, and it becomes the current directory.

Action on a file opens it in the editor if the format is known (“.txt”, “.mbe”, “.docx”, “.xlsx”, “.odt”, “.pdf”, “.brf”, “.rtf”, “.epub”). When the editor opens a file in a format other than “.txt” it converts the file to .txt format and then deletes the converted file. However, the original file can be found in the recycle bin (trash).

Note : The musicxml files can be read, played and edited on *b.note*. You will find another manual that explains how this works.

If you move back the display (left key of the left keypad) it will allow you to see the name of the current directory. A strong clic on the routing cursor key located above this name moves to the parent directory. Braille key 9 (correction) can also be used.

Each element of the directory starts with letters “f” or “d” marking its type (file or directory). A “test.txt” file will be displayed as “f test.txt” and a history directory as “d history”.

after the filename the size is displayed “(x mo)”, “(x ko)”, “(x octets)”.

In this list, characters can be typed, *b.note* will go on the file or directory that begins with this string, so you might quickly move throughout the list. Once the string is found, it is possible to move to the next one with F3.

Multiple selection

The file explorer enables the selection of files and directories to cut and copy.

When an element is part of a selection, it will be prefixed with characters “s”. By default, the current element is selected. A file test.txt will be displayed as “sf test.txt”.

When an element is not in the selection, it will be prefixed with characters “n”. A file test.txt will be displayed as “nf test.txt”.

In order to select, press F8 (braille 1259) ; to close a selection, press Esc (braille 1245A). When the selection is activated, you can switch from one element to another and press Space (braille A) to select/deselect the file/directory displayed.

To select the whole contents of the current directory, you can press the shortcut CTRL+a.

Trash

When you delete files or directories, they are sent to the trash. You can see the contents of the trash (via menu Directory>trash) and restore a file mistakenly sent to the trash. You can permanently delete files or directories from the trash.

Note : The user has to manage the trash properly, as the trash keeps being filled when deleting documents, the user will have to empty it from time to time.

File explorer menu

The explorer menu is displayed when pressing the down arrow key from the left keypad. The contents of the explorer menu is listed below. Pressing the same keys return to the directory of the files explorer.

The “applications” button of this menu permits the user to exit the explorer and return to the Applications menu.

File menu

- **new file(Ctrl + n)**: create a new file in the current directory, the content will be created with the editor.
- **new directory (Ctrl + d)**: create a new directory in the current directory.
- **send to** : send the file via Bluetooth to another system. (See APPENDIX - Bluetooth Files transfer).
- **rename (F2)**: enables the user to change the name of a directory or a file.
- **delete (Del)**: erase selected files and directories, and send them to the trash. They might be restored from the trash if needed.
- **zip**: create a zipped file named by the first file’s name or directory selected.
- **extract**: unzip the selected zip file.
- **update (F5)** : allows the user to rebuild the files/folders list displayed.

Edition menu

- **beginning/end of selection (F8/Esc.)**: this function permits to enter and exit the selection mode (see subchapter from previous page “Multiple selection”)
- **copy (Ctrl + c)**: copy in the clipboard the selected files and directories.
- **cut (Ctrl + x)**: same as “copy” but the original elements will automatically be erased after pasting.
- **paste (Ctrl + v)**: place the copied/cut files and directories into the current directory.
- **select all (Ctrl + a)**: select all files/directories in the current directory.

Go to menu

- **bluetooth**: displays the contents of “bluetooth” directory where the files received via bluetooth are stored.
- **trash**: displays the contents of the “trash” directory where erased files are stored.

- **back-up**: displays the contents of the “back-up” directory where the back-up files are stored.
- **my documents**: displays the contents of “my documents” directory where the documents are stored.
- **USB stick**: displays the USB stick connected to the device.
- **related directory**: displays the contents of a parent directory.

Back-up menu

- **save**: creates a zip file in the “back-ups” directory including the entire “my documents” file. This file may be transferred via Bluetooth to another computer or Android device, by pressing “send to “.
- **restore**: restores “my documents” directory from a back-up file located in the “back-ups” directory.

Applications button

- This button permits return to the Applications menu.

Special bluetooth and back-up files menu

In these directories, the menu is incomplete and only displays relevant functions.

Trash menu

In this directory, some functions of the menu are deleted, the file menu is presented as below :

File menu

- **Restore** : restores the entire selected files and directories from the trash to its original place (the one before sending it to the trash).
- **Definitely delete** : erases permanently the selected files and directories.
- **Empty the trash**: deletes permanently all files and directories from the trash.

The editor

The editor presents the content of a text from a file made of paragraphs.

These paragraphs are segmented in lines of regular characters defined by the user. By default, this number of characters is identical to the braille display device (20 or 40 according to the version).

The edit cursor is represented by the blinking dots 7 and 8 under the next character. Also a selected text is marked with blinking dots 7 and 8.

The “forward / backward” feature of the braille display (right and left arrow keys from the left keypad or light click on routing cursor) moves the cursor at the beginning of the line only if a text is not selected. This “forward/backward” function enables users to read the selected text.

A keyboard shortcut **Ins+F** allows users to enter in incremental search mode.

In this mode, you just have to type a sequence of characters and the editor will move to the first occurrence. **F3** allows you to move on to the following ones.

If new characters are typed after 1 second they will be interpreted as a new search sequence.

This search is indifferent to accents and the case of characters.

The **Escape** keyboard shortcut is used to exit this mode.

The documents can be read in computer braille or contracted braille (see APPENDIX - “Controller keyboard shortcuts”)

The editor has different functions that allow it to navigate throughout the document. (See APPENDIX “Keyboard shortcuts”)

The editor has its own menu. See details below.

The editor’s menu

The editor’s menu is displayed once pressing the down arrow key from the left keypad. You can also return to the editor with this key.

The “applications” button of this menu exits the editor and returns to the Applications menu.

File

- **Close (Ctrl + F4)** : closes the document, if it has been modified, you will be able to save it or not.
- **Save (Ctrl + s)** : saves the changes made.
- **Statistics** : displays a dialogue box indicating the number of paragraphs / words / characters in this document.

Edition

- **Beginning / end of selection (F8 / Esc.)** : Enter and exit the selection mode, the functions of the cursor's movements will become functions of extension of the selection. This mode is also activated with functions F8 and Esc.
- **Cut (Ctrl + x)** : Copy the selected text from the clipboard and erase it from the document.
- **Copy (Ctrl + c)** : Copy the selected text into the clipboard.
- **Paste (Ctrl + v)** : Paste the selected text from the clipboard into the document where the cursor is positioned.
- **Select all (Ctrl + A)** : Select the whole document.
- **Cancel (Ctrl + z)** : Cancel the last operation made, a press or consecutive presses with less than 5 sec between each, will be considered as only one operation.
- **Restore (Ctrl + y)** : Restore the operation previously canceled.
- **Cursor** : Displays a dialogue box showing the cursor's coordinates. They can be modified in order to move the cursor.

Math

The text editor recognises mathematical expressions and can calculate it. See ANNEXE - Editor - Math.

- **Calculate line (Ctrl + m)** : Calculate the mathematical expressions of the line with the cursor..
- **Calculate bloc (Ctrl + t)** : Calculate the mathematical expressions of several successive lines.

Search

- **Search (Ctrl + f)** : displays a dialogue box to search a line of characters in a text from the cursor's position. (See APPENDIX Editor - Search)
- **Replace (Ctrl + h)** : displays a dialogue box that is similar to the "search" dialogue box. It has an additional area to edit characters that will be replacing the text found.
- **Next (F3)** : select the next occurrence from the searched text.
- **Replace and next (F4)** : replace the searched text and select the next occurrence from the searched text.
- **Previous (Shift + F3)** : select the previous occurrence from the searched text.
- **Replace and previous (Shift + F4)** : replace the searched text and select the previous occurrence from the searched text.
- **Replace all (F5)** : replace all occurrences from the searched text by the alternate text.

Insertion

- **Result** : insert the result of the last mathematical calculation.

- **Date** : Insert the date where the cursor points and shows “day of the week, day of the month, month, year” so for example “wednesday 25th of March 2020”.
- **Signature** : Insert the content of the file “signature.txt” located in the directory “Document” of *b.note*. This function will not work if this file has not been previously created.

Bookmarks

- **Insert / Erase (Ctrl + F2 / Ctrl + Shift + F2)** : Place a bookmark at the cursor’s position or remove it if there is already one.
- **Next (F2)** : Scroll down with the cursor in the document until the first bookmark is encountered. If no bookmark is found, it moves back up to the beginning of the document.
- **Previous (Shift + F2)** : Scroll up with the cursor in the document until the first bookmark is encountered. If no bookmark is found, it moves back down to the end of the document.
- **Erase all** : Erase all bookmarks from the document.

Vocalisation

- **Paragraph (Ctrl + r)** : Start “text to speech” of the paragraph where the cursor is positioned.
- **Document (Ctrl + d)** : Start “text to speech” of the document from the paragraph where the cursor is positioned.
- **Volume** : Open a dialogue box that has 2 buttons to turn the volume up or down, a vocal feedback will help to adjust the settings.
- **Speed**: As for the volume, it adjusts the speed of the “text to speech” function.

Applications button

- This button permits return to the Applications menu.

Settings

In one page, this application presents the different settings of *b.note*.

You will find :

- Date and time
- Battery life information
- Vocalisation settings
- USB settings
- Bluetooth settings
- The wifi settings
- The user interface settings
- The editor settings
- The math settings
- Language settings
- Keyboards settings
- Standby settings
- Version information

In this page, it is possible to type characters, *b.note* will go where the string of typed characters are, you will be able to navigate quickly throughout the page.

Once the string is found, it is possible to move to the next one with F3.

Any keyboard action on the displayed line will trigger the dialogue box to modify the parameter, so any changes in the parameter of the device operate really fast.

Going through the menu is another way to modify the settings of *b.note*.

Details of the settings

Clock

- **Date and time** : These settings enable to date accurately the documents that will be modified by the editor.

Battery

- **Battery** : this line shows the remaining battery percentage, the charger capacity, the tension and voltage of the battery.

Vocalisation

- **Audio volume and speed** : These settings enable the user to set the volume and the “text to speech” speed. On *b.note 2nd* generation, the volume can have different values whether the headset is plugged or not.
- **language**: This parameter enables the selection of the speech synthesis language.

- **synthesis:** This parameter allows the user to choose between “picotts”, “mbrola” or “espeak” as speech synthesis.
- **voice:** This parameter allows the user to choose a voice for a given language and speech synthesis.
- **headset:** This parameter only available on *b.note 2nd* generation can not be modified, it shows if a headset has been detected or not. The audio output switches on the headset when a headset is connected.

USB

- **usb-a-hid and usb-b-hid keyboard:** shows how the braille combinaisons are sent, when working on one of the 2 usb port series, as a USB keyboard or to the screenreader directly. These settings can be modified independently but the screenreader should support them, so the changes made might not last. (See APPENDIX - USB Braille keyboard)

Bluetooth

- **Name:** The Bluetooth adapter is named by default “Esys-bnote-nnnn” where “nnnn” is the serial number of the device. Though you can customize the last part of this name. In order to make this name change effective, *b.note* will have to be restarted.
- **Visibility :** You can make the Bluetooth adapter visible and allow it to be detected for pairing. This parameter will remain in the defined state, it would be better to make it invisible to avoid any unpleasant pairings.
- **List of paired devices :** This line lists the paired devices, which leads to a dialogue box in order to erase any pairing.
- **Automation:** Each paired device is presented on a line that will show the *b.note's* reaction if there is a connection, do nothing or move automatically to the Bluetooth mode.

Wifi

- **Connected to :** Gives the SSID of the connected wifi spot.
- **Bookmarks :** lists the saved ssid access points, any action will define a ssid/password of a new access point. In this dialogue box, a scan button will show the closest access points.
- **IP address :** displays the IP address of *b.note* when connected in Wifi.

User interface

- **Message language:** This parameter enables language choice of all *b.note* messages.
- **Braille language:** This parameter enables the selection of the braille table used.
- **Braille type:** This line indicates the type of braille used to display menus, dialog boxes, the list of folders/files in explorer and settings. It is possible to set this parameter to braille dots-8, grade1 or grade2.

- **Visible shortcuts** : this setting authorizes the visualization of the shortcuts next to each element of the menu.
- **Visible games**: this setting authorizes the display of the games in the Application menu.
- **Visible audio** : this setting authorizes the display of the audio player in the Application menu.
- **Visible radio** : this setting authorizes the display of the web radio in the Application menu.

Editor

- **Braille type**: This line indicates the type of braille used to display documents in the editor. It is possible to set this parameter to braille dots-8, grade1 or grade2.
- **Line length**: This line indicates a dialogue box to adjust the maximum number of characters in an editor's line. The text sections are cut in several lines where the words are indivisible. By default, this parameter equals the number of cells from the braille display (20 or 40) so no broken word can be found on the display.
- **Display line moving forward** : Two types of movements on the display are available, the "normal" mode where each editor's line is presented and the "significant" mode where the empty lines disappear.
- **Cursor** : This parameter enables to hide the braille line of the cursor in the text (braille dots 7 and 8 blinking)
- **Visible Dots 7-8** : This parameter enables to hide dots 7 and 8 from the editor's braille displays.

Math

- **format** : 2 display format are available, standard or scientific (exponent 10 display)
- **précision** : Define the numbers of decimal.
- **fraction** : Allow to display by fraction when possible.
- **angle** : this parameter sets the angle unit of the calculator with degree or radian.

Keyboard

- **Braille keyboard** : This parameter enables the user to move the braille keyboard into one of the unimanual modes (see APPENDIX - Unimanual braille keyboard).
- **Braille 78** : This parameter conditions actions when braille keyboard dot 7 or 8 are typed alone.
If it is set to "character" the character of the chosen braille table is generated.
If it is set to function, pressing b7 performs the Correction function (backspace) and it on b8 makes Enter.
- **Inverted keypad** : This parameter enables switching the left keypad's functions and the right keypad's functions.

Routing cursor keys

- **Light, strong, adjacent, double light, double strong press** : These settings permit adjustments of the routing cursor keys operation (see APPENDIX - Routing cursor keys functions).

Standby

- **Time out for transport** : This parameter defines the period (min.) during no activity that will lead to switching the device in transport mode. The 0 value invalidates this mechanism.
- **Time out for shutdown** : This parameter defines the period (min.) during no activity will lead to shutdown the device. The 0 value invalidates this mechanism.

Test (menu only)

- This function sets and clears periodically all dots of the braille display. To stop this function press a key of the left or right pads.

Reset (menu only)

- This fonction reset *b.note* parameters, its use is exceptional.

Versions

- **Type** : This line indicates the exact model of the device and its serial number.
- **Applications** : This line indicates the applications software version.
- **Firmware** : This line indicates the software version of the first processor.
- **Sdcard** : This line indicates the linux image version of the second processor.
- **2nd generation** : if the value of this parameter is set to Yes, therefore the device is *b.note* 2nd generation. It has integrated speakers and a USB port to plug a USB stick.
- **Linux** : shows the linux core version of *b.note*

The Audio Players

b.note has 2 audio players visible or not, according to the setting “mp3 visible” or “radio visible” from the Preferences section.

Keyboard shortcuts can be available to change volume and use the pause/play function :

- Down key + right key from the left keypad or Ctrl+'+' on the braille keyboard = volume up
- Down key + left key from the left keypad or Ctrl+'-' on the braille keyboard = volume down
- Up key + left key from the left keypad = pause/play

Audio

An audio file player will allow you to listen to .mp3, .wma and .ogg files.

This player will allow you to set up a playlist from files you would have put in *b.note*.

Audio Player menu

Playlist menu

- **Open (Ctrl+o)** : open the dialogue box to pick a playlist.
- **Save (Ctrl+s)** : Save the current playlist.
- **Delete** : delete a saved playlist from the list of saved playlists.
- **Delete all** : delete all playlists saved.

Element menu

- **Add (Ctrl+a)** : add a directory or a file into the current playlist.
- **Delete** : delete the element displayed.
- **Delete all** : delete the playlist displayed.
- **Put at the beginning (Ctrl+h)** : put the displayed element on top of the list.
- **Put at the end (Ctrl+e)** : put the displayed element at the end of the list.
- **Go up (Ctrl+u)** : move the displayed element to one line above.
- **Go down (Ctrl+d)** : move the displayed element to one line down.

Player menu

- **Play the element (Enter)** : play the displayed element.
- **Play the list (Ctrl+l)** : play the list.
- **Next (Ctrl+f)** : while the list is being played, this function will allow the user to move to the next element.
- **Previous (Ctrl+b)** : while the list is being played, this function will allow the user to move back to the previous element.
- **Pause (Ctrl+p)** : will stop the listening, press again and it will start playing again.
- **Stop (Ctrl+t)** : will stop the listening.
- **Position (F2)** : open a dialogue box to change the player position by percentage in the Play element.
- **Volume** : open a dialogue box to change volume.

Radio

A web radio player is available. Make sure *b.note* is connected to a Wifi access point (see chapter Preferences).

A web radio has the following features :

- A name
- An origin : downloaded from a specific server or defined manually by the user.
- A feed URL

Enter (b9A) on a radio from the list will play it or stop it.

Radio player menu

Radio menu

- Radio with url (Ctrl+u) : open a dialogue box to pick a new radio, name it and give it a URL feed.

Note : If the name of this new radio conflicts with one of the ones downloaded from the server, it replaces it. The only way to find it would be to erase the radio defined by this function.

- Delete the radio : this function will erase the current radio.
- Update the list from the internet (Ctrl+n) : Update all radios defined by the server without losing radios defined manually.

Player menu

- Play (Ctrl+l) : this function will play the current radio.
- Stop (Ctrl+t) : this function will stop the radio.
- Volume : this function will open a dialogue box to set the volume of the radio.

The games

b.note includes 2 games that can be visible or not, depending on the “visible games” parameter from the preferences section.

Minesweeper

Rules of the game

The objective of the game is to clear a grill containing hidden bombs without detonating any of them, with help from clues about the number of neighbouring mines in each field.

The aim of the game is to uncover the empty fields in a minimum of time.

Display and movements

The grid is displayed on the braille display as :

Line number, grid positions, elapsed time

The position values are as follows :

‘*’ : non-discovered position,

‘ ‘ or a number : Position discovered

'b' : position where a bomb has been set

The movements of the cursor, indicated by braille dots 7 and 8 in the grid, are carried out with the right keypad, and the characters can be typed on the braille keyboard as follows :

' ' : order of the discovery of the position

'b' : présence of a bomb in this field

Mastermind

Rules of the game

The objective of the game is to propose a sequence of numbers. The system will respond by indicating the number of existing digits and the number of digits correctly placed in the sequence that needed to be guessed.

The main goal is to find the sequence in a minimum of proposals.

Display and movements

Each proposal is displayed on a line with the result.

You read the different proposals with the top and low keys from the right keypad.

The "Enter" key (b9A) will allow the user to make a new proposal.

Diary

The diary application was developed by Théotime Berthod (acres.louer.0l@icloud.com), using b.note developers mode. We would like to thank him for his participation.

You'll find all the information to develop your own application in the developers manual.

This app allows you to note events or homeworks when at schools in an integrated calendar.

Basic operation

At first opening it will display no event. This message remains until an event is added.

If one or more events are set they'll be displayed as follows.

Use up and down arrows to choose the event and enter or routing cursor to validate.

- date
- state
- subject (title)
- content (description)

App browsing

Several display modes are available and listed below. Press the Braille 9 key (backspace) to list them, then up and down key from the right keypad to choose and enter to validate.

- show from today : Display all event from the b.note date.
- show for today : Display the event for the b.note's date.
- Show Not Done : Display only the not done state event from the b.note's date
- Show all agenda : Display all the event
- Show calendar : switch to calendar mode

Calendar mode

Once switched to the calendar view the current day is displayed with the name of the day, the number, the month and the year.

Today is shown before the day to indicate you.

ex

*today friday 10 february 2023 2 events

If the day contain event a "*" is displayed before the name of the day and the number of event is shown after the year.

Up and down arrow will move one day before or next, the left and right arrow will move from one week before or next.

To display all the event of the selected day validate with enter or routing cursor.

To come back to the calendar view use backspace.

The event menu

New (CTRL+n):

Open a dialog box to create an event.

If you are

The day is selected just type the wanted day then use the routing cursor to select the month then the year. Then select the subject and type, then the content if you want to add more text.

Choose create to validate you event or cancel to delete it

modify (enter):

Open a dialog box with the same element as the create one to modify the event. A checkbox done yes or no is added.

Change status (CTRL+t):

change the status of the event done or not done.

Delete (del):

Display a warning box if you validate the event is deleted

Delete expired events (CTRL+del):

After validation delete all the prior to today's date events

Goto menu

Previous week (b235a) : go to first event of previous week

Next week (b256a) : go to first event of next week

Previous day (left arrow) : go to first event of previous day

Next day (right arrow) : go to first event of next day

The goto menu is not available in calendar view

Find menu

Find a date (ctrl + d) : type the day, the month and the year to go.

Find in agenda (ctrl + f)

Find a word or a sentence in the subject or the content. a checkbox is available to choose done or not done event.

DIARY MANAGER

Import diary (CTRL+i):

Open a dialog box to choose the .csv file to import.

ATTENTION: the .csv file must respect the following features.

- the separators must be ";"
- The first line must contain the four element "date ", "subject ", "content ", " todo ",
- An empty line should be present at the end of the file
- The date format must be " dd/mm/yyyy"
- The "todo" column must contain only 0 or 1 (0 « not done» and 1 « done »).

Export diary (CTRL+e):

Open a dialog box to create a .csv file. The default csv file name is my agenda with the date.

You may choose your own name then choose export button. Cancel button will get out the box without action.

Empty diary:

This function erases all the agenda content.

About:

Open a dialog box with the release information.

Diary settings

The settings are available in settings apps in the main menu

Display agenda: Yes or no the diary is visible or no in the main menu.

Default presentation (standard, today, not done, calendar): Choose which view will be displayed at start.

At start up report events not done for same day : yes or no, display a warning at b.note start for not done event for the same day.

At start up report events not done for next day : yes or non, display a dialog bow at b.note start for events not done for the next day.

b.note with a screenreader

b.note can communicate with another system via a USB connector or Bluetooth. Its use is not different from any other use of a standard refreshable braille display.

For more information, please go to the screenreader documentation and driver for *b.note*.

b.note has some distinctive features detailed below.

USB

b.note can be used as an azerty keyboard and work independently of the screenreader.

Therefore *b.note* will be able to show any braille combinations or transfer these combinaisons to the screenreader that will display the matching characters and functions. It will produce 2 entry modes (See APPENDIX - USB Braille keyboard).

Screenreaders Jaws and NVDA work with these features.

For NVDA : On the left keypad, press the down and right arrow keys simultaneously, or press the down and left arrow keys simultaneously, to go from one input method to another.

- The first mode enables a braille display to perform all keyboard shortcuts with Ctrl+key or Alt+key.
- The second mode enables the use of grade 2 with NVDA.

Note : a checkbox in NVDA braille settings permits to change this method.

For Jaws : The operating mode is in the driver's file "Program File/Freedom Scientific/Jaws2020/Driver/Braille/esysiris/eurobraille.ini" the name of the parameter is UseHidKeyboard=0 ou 1.

Bluetooth

Bluetooth can be used to connect *b.note* to a screenreader and transfer files between *b.note* and a Windows computer or any Android system (See APPENDIX "Pairing Bluetooth" and "Bluetooth files transfer").

APPENDIX - Editor - Search

The search for a string of characters in the editor can be done by scrolling down the document (F3), or scrolling up the document (Shift + F3).

Several parameters can refine the search :

- **Ignore character case**: If Yes, an alphabetical character is identified whatever the character case is (upper/lowercase)
- **Hide accents** : If Yes, a character is identified whatever the accentuation is, therefore é, è ê, ë and e become the same character.
- **Entire word** : If yes, only the complete words are identified in the search string.

APPENDIX - Editor - Math.

Description

b.note editor allows calculating math paragraphs.

One Paragraph must include only one math expression; you must not mix text and math expressions.

The calculating functions are available in the math menu in the editor.

You may write the math expressions in a computer Braille language or in BEU (Braille English Unified) described below.

Your paragraph should start by dot Braille 6 then dot Braille 2 to be recognized as math in computer braille or by dot Braille 56 then dot Braille 56 as math in BEU.

If you use several paragraphs each of them will start with a braille mathematical sequence (b6, b2 or b56,b56).

Math UEB language (Unified English Braille)

Generalities

Spaces are not significant.

Only lowercase characters are allowed.

The result of the calculation is stored in the “r” variable. so you may chained the calculations using this variable.

For statistical functions you can define values enumeration.

Numbers

They are preceded by a braille number indicator (⠼)

character = braille value

```
0 = b245
1 = b1
2 = b12
3 = b14
4 = b145
5 = b15
6 = b124
7 = b1245
8 = b125
9 = b24
decimal indicator = b256
space = b5
```

Constants

```
Pi = b45 + b1234
e = b15 + b4
```

Blocs

```
Fraction = 12356 ... b23456
Parenthesis = b5 + b126 ... b5 + b345
Bracket = b46 + b126 ... b46 + b345
Brace = b456 + b126 ... b456 + b345
Squareroot = b146 ... b346
Root n = b146 b35 n ... b346
```

Operators

```
Equal = b5 + b2356
Addition = b5 + b235
Subtraction = b5 + b36
Division = b5 + b34 ou b34 si derrière un nombre
Modulus = b456, b1256
Multiplication = b5 + b236 ou b6 + b35
exponent = b35
```


One argument functions

Logarithme népérien = b123 + b1345
Logarithme base 10 = b123 + b135 + b1245
Sine = b234 + b24 + b1345
Cosine = b14 + b135 + b234
Tangent = b2345 + b1 + b1345
Cotangent = b14 + b135 + b2345
Arc sine = b1 + b1235 + b14 + b234 + b24 + b1345
Arc cosine = b1 + b1235 + b14 + b14 + b135 + b234
Arc tangent = b1 + b1235 + b14 + b2345 + b1 + b1345
Arc cotangent = b1 + b1235 + b14 + b14 + b135 + b2345
Hyperbolic sine = b234 + b24 + b1345 + b125
Hyperbolic cosine = b14 + b135 + b234 + b125
Hyperbolic tangent = b2345 + b1 + b1345 + b125
Hyperbolic cotangent = b14 + b135 + b2345 + b125
Arc hyperbolic sine = b1 + b1235 + b234 + b24 + b1345 + b125
Arc hyperbolic cosine = b1 + b1235 + b14 + b135 + b234 + b125
Arc hyperbolic tangent = b1 + b1235 + b2345 + b1 + b1345 + b125
Arc hyperbolic cotangent = b1 + b1235 + b14 + b135 + b2345 + b125
Radian = b1235 + b1 + b145
Degree = b145 + b15 + b1245
Factorial = b235

Multi arguments functions

Sum = b234 + b136 + b134
Max = b134 + b1 + b1346
Min = b134 + b24 + b1345
Number = b1345 + b12
Average = b1 + b1236 + b15
Variance = b1236 + b1 + b1235
Deviation = b145 + b15 + b1236
Combination = b14 + b135 + b134 + b12
Arrangement = b1 + b1235 + b1235
Median = b134 + b15 + b145
Quartile 1 = b12345 + b136 + b1 + b1
Quartile 2 = b12345 + b136 + b1 + b12
Quartile 3 = b12345 + b136 + b1 + b14

Arguments separator = b6
Arguments repetition = b5 + b36 + b4 + b345

Examples

$$1200 = 1200 : \text{"} \cdot \cdot : \cdot \cdot \cdot \text{"}$$
[illegible]
$$8.93 = 8.93 : \text{"\ddot{\cdot}\ddot{\cdot}\ddot{\cdot}\ddot{\cdot}\ddot{\cdot}\ddot{\cdot}\ddot{\cdot}\ddot{\cdot}"}$$

operators

$8 - 3 - 2 = 3$: "⠠⠨⠒⠑⠒⠐⠶⠒⠏⠒⠐⠆⠒⠑⠒⠐⠶⠒⠏⠒⠐⠆"

3 + 5 = 8 ; " ⋮ " ⋮ ⋮ " ⋮ "

$$9 / 12 = 3 / 4 : \text{ " } \therefore \therefore \therefore \text{ " }$$
$$9 / 12 = \frac{3}{4} : " \therefore \cdot \therefore :$$
$$9 / 12 = 3 / 4 : " \therefore \therefore \therefore : "$$
$$1 - 9 / 12 \equiv 1 / 4 : " \cdot \cdot \cdot \cdot "$$
$$\langle\langle 1/2 \rangle + \langle 1/3 \rangle\rangle / 1 + 1 = 5 / 12 : \text{"}\ddot{\text{H}}\ddot{\text{H}}:\ddot{\text{N}}:\ddot{\text{N}}:\ddot{\text{H}}:\ddot{\text{H}}:\ddot{\text{N}}:\ddot{\text{N}}:\ddot{\text{H}}:\ddot{\text{H}}:\ddot{\text{N}}:\ddot{\text{N}}:\ddot{\text{H}}\text{"}$$
$$-3 - 2 = -5 \quad ; \quad " \cdot \cdot \cdot " \cdot \cdot \cdot "$$
$$1 + 4! = 25 : \text{ " : : : " }$$

```
(modulus) 3 | 2 = 1 : ".:" 14 :."
```

parenthesis

[illegible][illegible]

trigonometric

$\cos(\pi/2) = 0$: " " " " " " " " " " " "

exponent

$$3^2 = 9 \quad ; \quad " \therefore " \therefore " \therefore "$$

$3^2 + 1 = 10$: " : : : "

$2^{10} = 1024$: " . . . "

others functions

$$2 * \ln(e) = 2 : \text{"::: :::: :::: ::::"}$$

`SORT 9 = 3 : "":':':"`

$\text{SORT}\langle 9+1 \rangle = 3.16 : \text{"::' .::' ::"}$

CUBEROOT<8> = 2 : "":."":~":."

```
cos(pi/2) = 0 : "": .: .: .: .:
```

pi : " 3 3 "

parameters

$$3^2 = 27 : \text{"::."} :$$
$$r+1 = 28 : \text{ " } \ddot{\cdot} \text{ " } \ddot{\cdot} \text{ " } \ddot{\cdot} \text{ " }$$

x = 2 : " :: " :: " :: "

$$V = 4 : \begin{matrix} \text{''} & \text{::} \\ \cdot & \text{::} \\ \cdot & \text{::} \\ \cdot & \text{::} \end{matrix} \begin{matrix} \cdot & \text{::} \\ \cdot & \text{::} \\ \cdot & \text{::} \\ \cdot & \text{::} \end{matrix} \begin{matrix} \cdot & \text{::} \\ \cdot & \text{::} \\ \cdot & \text{::} \\ \cdot & \text{::} \end{matrix} \begin{matrix} \cdot & \text{::} \\ \cdot & \text{::} \\ \cdot & \text{::} \\ \cdot & \text{::} \end{matrix}$$
$$x^y = 16 : " :: : "$$
$$2x = 4 \quad ; \quad " :: " :: "$$

statistics

[illegible] $\max(3, 4) = 4$: " :: :: : " , :: : "

```
min(2,6) = 2 : "⋮ ⋮ ⋮ ⋮ ⋮ ⋮"
```

```
nbr(1;3;5;7) = 4 ; "1 3 5 7" , "1 3 5 7" , "1 3 5 7" , "1 3 5 7"
```

```
ave(7;13) = 10 : " . : . : . : . : . : "
```

```

med(1;3;5;7) = 4 : "médiane de 1, 3, 5, 7"
med(1;2;3;5;7) = 3 : "médiane de 1, 2, 3, 5, 7"
qual(1;2;3;5;7) = 2 : "qualité de 1, 2, 3, 5, 7"
var(2;5) = 2.25 : "variance de 2, 5"
dev(2;6) = 2 : "écart-type de 2, 6"
comb(96;6) = 927048304 : "combinaisons de 96, 6"
arr(49;6) = 10068347520 : "arrangements de 49, 6"
repetition : sum(2->3;3->6) = 24 : "somme des répétitions de 2, 3, 6"

```

Math computer braille language

Generality

Spaces are not significant.

The uppercase character will be converted to lowercase before analysis.

Numbers may be typed as 10 exponents.

Example, 2000 is 2e3 and 0.02 is 2e-2.

Any character not a command will be detected as a variable then 2a will be detected as 2 times the "a" variable if the variable was defined in the previous paragraph.

You may type

a=2

2a

You have 4 after calculation.

The result of the calculation is stored in the "r" variable. so you may chained the calculations using this variable.

If the variable has more than 1 character you must use the block label {}.

Exemple toto variable is written {toto}

For statistical functions you must use the parenthesis block and the semicolon to separate each value.

Example : (12; {titi}=(3 - 1) (2 + 1); 45; 1+2; 55)

blocks

()	parenthesis
[]	bracket
{ }	variable label

constants

pi	3.14...
e	2.7...

operator

+	addition
-	subtraction
*	multiplication
/	division
%	modulo
^	exponent
=	affectation

one argument functions

ln	natural logarithm
log	logarithm base 10
sqrt	square root
deg	degree conversion
rad	radian conversion
!	factorial
sin	sine
cos	cosine
tan	tangent
cot	cotangent
asin	arc sine
acos	arc cosine
atan	arc tangent
acot	arc cotangent
sh ou sinh	hyperbolic sine
ch ou cosh	hyperbolic cosine
th ou tanh	hyperbolic tangent

coth	hyperbolic cotangent
ash ou asinh	hyperbolic arc sine
ach ou acosh	hyperbolic arc cosine
ath ou atanh	hyperbolic arctangent
acoth	hyperbolic arc cotangente

Note : For exponent on a function you may either use $\cos^2(45)$ or $\cos(45)^2$

Several arguments functions

nroot	nth root
nbr	number of element
max	maximum
min	minimum
sum	sum
ave	average
qua1	quartile 1
qua2, med	quartile 2 or median
qua3	quartile 3
var	Variance
dev	Deviation
comb	Combinaison
arr	Arrangement

APPENDIX - USB braille keyboard

When the device is connected via USB, the characters and functions of the braille keyboard can be sent in different ways :

- USB-HID : The characters and functions are produced the same way as the usual USB keyboard. They can be independent of the operating system or the screenreader used.
- Driver: The characters and functions are being sent to the screenreader's driver. They are definitely dependent of the screenreader used.

The screenreader or the software communication of *b.note* can be used to turn an operating mode into another. However, it is possible to acknowledge the operating system you are in or change it manually in the menu.

APPENDIX - Unimanual braille keyboard

The braille keyboard has different operating modes that you can select in the menu Applications settings keyboard>braille.

Standard :

Anytime you take your fingers off the braille keyboard, the braille combination displayed is the last one typed. However, it is possible to change a combination before releasing the keyboard by changing the pressed keys and waiting a moment before taking your fingers off the full combination.

Unimanual 1 :

You type the braille dots by several successive or combined presses on the keys, then approve this number of presses with the braille key A.

If the A braille key is part of the braille combination, it will have to be typed in combination with another dot, then re-press to approve the combination.

Unimanual 2 :

It is a faster operating mode as the approval of the code is automatic.

The braille display is divided in 2 parts, one part 1,2,3,7,9 and the other part 4,5,6,8,A. You only need to type the first part of the braille combination in one or several presses, then you type just once the second part, and the braille combination will be generated.

For braille combinations that only have dots in one part, you need to press the A braille key to approve.

Unimanual 3 :

This operating mode enables to enter the braille combination using half of the left keyboard part (dots 1,2,3,7). After typing this combination, the second half is typed as follows 1-4, 2-5, 3-6, 7-8, 9-A.

The “A” and “9” keys typed with one half, are taken into account as they are.

The “9” or “A” keys are used to produce Correction or Space but also to approve the braille combinations that do not have the other half.

The “4” key alone permits the typing of the braille combinations that do not have the first half.

Unimanual 4 :

This operating mode is the same as the previous one but using dots 4,5,6,8,A. In order to type the first half of the combination, we will use the following combination 4-1, 5-2, 6-3, 8-7 and A-9. The braille key 1 will permit the typing of the braille combinations without the first half.

APPENDIX - Functions of the routing cursor keys

Multiple keyboard actions are possible on routing cursor keys:

- Light click (first contact)
- Stronger click (second contact)
- 2 successive light clicks (double click first contact)
- 2 successive stronger clicks (double click second contact)
- Click on 2 adjacent routing cursor keys

A different function can be assigned to each of these actions. By default, the functions will be as follow :

Actions	Functions by default
Light click on the first routing cursor keys	Moving back the braille display
Light click on any routing cursor keys	Moving forward the braille display
Strong click	Action at the current position
2 successive light clicks	Same function as double click with the mouse. In a text it can select a word for example
2 successive strong clicks	Same function as double click with the mouse. In a text it can select a word for example
Click on 2 adjacent routing cursor keys	Contextual Menu (for screen readers)

APPENDIX - Bluetooth pairing

The bluetooth pairing of a device with *b.note* is quite simple :

This bluetooth pairing must be done only once. The device saves a list of paired peripherals.

Pairing with a PC

- Start *b.note* and select “bluetooth-applications” in the main menu.
- Activate Bluetooth of the PC you want to pair. Then launch a search for a peripheral. *b.note* must appear under the name “Esys-bnote-xxxxx”.
- Launch the pairing by approving the device on the PC. A serial port is open (COMn on a PC), this port will be used by the screenreader.
- Then you can make your *b.note* invisible if you want.

Pairing with a tablet or an Android smartphone

- Start *b.note* and select “bluetooth-applications” in the main menu.
- Activate Bluetooth on the tablet, to do so, go to Settings>Connection of the device and select Bluetooth.
- In the list of available devices, you must see *b.note* appear under the name “Esys-bnote-xxxxx”. You must press to launch the pairing.
- “Esys-bnote-xxxxx” goes to the list of devices associated.
- Then you can make your *b.note* invisible if you want.

Pairing with an Apple tablet or smartphone

- Start *b.note* and select “bluetooth-applications” in the main menu.
- on your Apple product go to parameters / accessibility / voice over / braille
- In the list of available devices, you must see *b.note* appear under the name “Esys-bnote-xxxxx”. You must press to launch the pairing.
- “Esys-bnote-xxxxx” goes to the list of devices associated.
- Then you can make your *b.note* invisible if you want.

APPENDIX - Bluetooth file transfer

Transfer from PC to *b.note*

- Check if your *b.note* is visible in Bluetooth (menu settings>bluetooth in the file explorer of *b.note*).
- Open the Windows files explorer on your PC.
- Open the contextual menu on the selected file (right click on the mouse) and select “Send to > Bluetooth peripheral”. You can also select a group of files.
- Pick Esys-bnote in the list of proposed devices then click Next.

Once received, the file is located in a directory named “bluetooth” on *b.note*.

This location is dedicated to receiving files, so it is necessary to move the files received in a directory of your choice in order to open the file with the editor.

It is recommended to keep the directory “My documents/bluetooth” empty because if there is a file in this directory with the same name, it will lead to transfer failure.

Note:

Sending the file is also accessible with Windows by pressing the Bluetooth icon on the notification bar (systray). After picking the Bluetooth peripheral, the files will have to be selected to be sent.

Transfer from *b.note* to PC

- Go to the file explorer of *b.note*
- Select the file you want to transfer. It is also possible to select several files for a grouped mailing.
- Select the function of the menu File>Send to.
- Pick the computer’s name that needs to receive the file (from the list of peripherals).
- A dialogue box indicates you need to turn the PC into files inbox mode. On the PC, click on the Bluetooth icon from the notification bar and pick “Receive a file”. Then click Ok on *b.note* device to launch the transfer.

Once the transfer is done, a dialogue box “Save as” opens on the PC, it allows you to choose the directory where you want the received file to be saved.

Note : If a directory or several files are selected for a grouped mailing, a zipped file (.zip) will be sent to the PC. This file will be named after the first selected file.

Transfer from an Android tablet (or smartphone) to *b.note*

Check that *b.note* is visible in Bluetooth (menu settings>bluetooth in the file explorer of *b.note*).

Bluetooth on the tablet (or smartphone) must be activated, then pair it to the braille device (by clicking on the peripheral listed in “Available devices”).

The file will be sent when the file via Bluetooth is shared and your braille device in the list is selected.

Transfer from *b.note* to an Android tablet (or smartphone)

- Go to the file explorer of *b.note*.
- Select the file you want to transfer. It is also possible to select several files for a grouped mailing.
- Select the function of the menu File>Send to.
- Select the computer's name in the list of peripherals that need to receive the file.
- A dialogue box indicates you need to turn the PC into files inbox mode, click Ok to ignore this dialogue box and launch the transfer.
- A file transfer notification opens on your tablet / smartphone, then you need to accept the transfer.

Once the transfer is done, the file will be placed in “Files received”.

Note : If a directory or several files are selected for a grouped mailing, a zipped file (.zip) will be issued. This file will be named after the first selected file.

APPENDIX - Controller keyboard shortcuts

Left keypad functions

- Press the up arrow key to return to the Applications menu of *b.note*,
- Press the down arrow key to enter or exit a menu from an application of *b.note*,
- Press the right arrow key to move forward on the braille display,
- Press the left arrow key to move backward on the braille display,
- Press the down arrow key + right arrow key to increase the volume of the media player,
- Press the down arrow key + left arrow key to lower the volume of the media player,
- Press the up arrow key + left arrow key to pause or play again the media player.

In the editor,

- Press both up and right arrow keys to trigger the “move forward” function of the braille display in computer or contracted braille,
- Press both up and down arrow keys to launch the autoplay of the document, the display moves on to the text depending on the text displayed.
- Press both left and right keys to lower the speech rate of the speech synthesis.

Right keypad functions

The 4 buttons are used to simulate the arrow keys.

In the editor,

- The arrow keys enable to move the cursor,
- Press both up and left arrow keys, so the cursor moves to the beginning of the document,
- Press both up and right arrow keys, so the cursor moves to the end of the document,
- Press both down and left arrow keys to turn the volume of the speech synthesis down,
- Press both down and right arrow keys to turn the volume of the speech synthesis up.
- Press both left and right arrow keys to increase the speech rate of the speech synthesis.

In the file explorer,

- The up and down arrow keys enable the navigation throughout the list of documents,
- Press up and left arrow keys to select the first element of the list of documents,
- Press up and right arrow keys to select the last element of the list of documents.

In the menus,

- The left and right arrow keys enable the selection of the first or last element of the menu,

- Press both up and left arrow keys to select the first element of the menu,
- Press both up and right arrow keys to select the last element of the list of the menu.

APPENDIX - Braille keyboard shortcuts

General

Ctrl++ / Ctrl +-	Increase / decrease the media players volume
Ctrl+A / Ctrl+C / Ctrl +X / Ctrl+V	Select all / Copy / Cut / Paste
Ctrl+Tab /Ctrl+Maj_Tab	Switch from one app to another
Win+Character	Used to switch to another application (character = '1' to '4' for bluetooth applications, '5' to '9' for the various open editors, and menu shortcut letter for other applications. 'e' for the file explorer, 'p' for preferences...)

Menu / Dialogue box

Home	First element
End	Last element
Right	Next element
Left	Previous element
Tab	Next element (with an output edition mode for the dialogue boxes)
Shift+Tab	Previous element (with an output edition mode for the dialogue boxes)

Editor

FUNCTIONS :

Ctrl+S	Save
F2	Go to the next bookmark
Shift+F2	Go to the previous bookmark
Ctrl+F2	Insert/delete bookmark
Ctrl+Shift+F2	Delete all bookmarks
Ctrl+F4	Close the document with a save request
Ctrl+F	Search
Ctrl+H	Search and replace
F3	Next search
Shift+F3	Previous search
F4	Replace and next search
Shift+F4	Replace and previous search
F5	Replace all
F8	Beginning of selection
Esc.	End of selection / End of incremental search
Ctrl+D	Reading document from a current paragraph

Ctrl+P	Reading current paragraph
Ctrl+R	Compute mathematics line
Ctrl+M	Compute mathematics bolc of lines
Ctrl+Z	Undo
Ctrl+Y	Redo
Ins+F	Entering incremental search mode / Esc to exit.

CURSOR MOVEMENTS (with Shift or after F8 : modify the selection):

Home	Beginning of the line
End	End of line
Right	Character on the right
Left	Character on the left
Up	Previous line
Down	Next line
Page down	Move the cursor 20 lines down the document
Page up	Move the cursor 20 lines up the document
Ctrl+Home	Beginning of the document
Ctrl+End	End of document
Ctrl+Right	Next word
Ctrl+Left	Previous word
Ctrl+Up	Previous paragraph
Ctrl+Down	Next paragraph
Ctrl+Page down	Move the cursor 50 lines down the document
Ctrl+Page up	Move the cursor 50 lines up the document

File explorer

Ctrl+n	New file
Ctrl+d	New directory
Ctrl+u	Eject the USB key (when the cursor is on it)
F2	Rename the selected file or directory
F3	Next search (for incremental search)
F5	Refresh the current directory (very useful for the bluetooth directory)
F8	Beginning of selection
Escape	End of selection
Space	Invert the selection of current element
Backspace	Display the content of the related directory
Delete	Erase the selected files/directories
Home	First element of the list of files
End	Last element of the list of files

Audio Player

Ctrl+o	Open a playlist
Ctrl+s	Save a playlist

Ctrl+a	Add an element or all elements from a directory to a playlist
Delete	Delete the displayed element
Ctrl+h	Move the element to the beginning of the list
Ctrl+e	Move the element to the end of the list
Ctrl+u	Move the element up to the line above
Ctrl+d	Move the element down to the line below
Ctrl+l or enter	Play the element
Ctrl+l	Play the list
Ctrl+f	Move to the next element in the playlist being played
Ctrl+b	Move to the previous element in the playlist being played
Ctrl+p	Pause / keep playing
Ctrl+t	Stop playing
F2	Change current position of the playing

Radio

Ctrl+u	Definition of a new radio with url
Delete	Delete a radio
Ctrl+n	Reconstruct the list of radios from Eurobraille server
Ctrl+l	Play the current radio
Ctrl+t	Stop playing

APPENDIX - 8-dot computer braille characters (US)

The braille chart used with Esysuite is the same as the computer braille chart defined in 2007 by the Evolution commission of French Braille for the character set CP-1252.

Code ANSI - Braille Combinaison - Character Description

0 - 478 - null	17 - 1234578 - device control 1
1 - 178 - start of heading	18 - 123578 - device control 2
2 - 1278 - start of text	19 - 23478 - device control 3
3 - 1478 - end of text	20 - 234578 - device control 4
4 - 14578 - end of transmission	21 - 13678 - negative acknowledge
5 - 1578 - request	22 - 123678 - synchronization idle
6 - 12478 - confirmation	23 - 245678 - end of transmission block
7 - 124578 - bell	24 - 134678 - cancel
8 - 12578 - backspace	25 - 1345678 - end of medium
9 - - character tabulation	26 - 135678 - substitute
10 - 78 - line feed	27 - 24678 - escape
11 - 1378 - line tabulation	28 - 125678 - file delimiter
12 - 12378 - form feed	29 - 1245678 - group delimiter
13 - - carriage return	30 - 4578 - data delimiter
14 - 134578 - shift out	31 - 45678 - unit delimiter
15 - 13578 - shift in	32 - - space
16 - 123478 - data link escape	33 - 2346- exclamation mark

34 - 5 - quotation mark	85 - 1367 - u uppercase
35 - 3456 - hash key	86 - 12367 - v uppercase
36 - 1246 - dollar	87 - 24567 - w uppercase
37 - 146 - per cent	88 - 13467 - x uppercase
38 - 12346 - ampersand	89 - 134567 - y uppercase
39 - 3 - apostrophe	90 - 13567 - z uppercase
40 - 12356 - left parenthesis	91 - 2467 - left bracket
41 - 23456 - right parenthesis	92 - 12567 - backslash
42 - 16 - asterisk	93 - 124567 - right bracket
43 - 346 - plus sign	94 - 457 - circumflex accent
44 - 6 - comma	95 - 456 - underline
45 - 36 - hyphen-minus	96 - 4 - grave accent
46 - 46 - point	97 - 1 - a lowercase
47 - 34 - slash	98 - 12 - b lowercase
48 - 356 - zero	99 - 14 - c lowercase
49 - 2 - one	100 - 145 - d lowercase
50 - 23 - two	101 - 15 - e lowercase
51 - 25 - three	102 - 124 - f lowercase
52 - 256 - four	103 - 1245 - g lowercase
53 - 26 - five	104 - 125 - h lowercase
54 - 235 - six	105 - 24 - i lowercase
55 - 2356 - seven	106 - 245 - j lowercase
56 - 236 - eight	107 - 13 - k lowercase
57 - 35 - nine	108 - 123 - l lowercase
58 - 156 - colon	109 - 134 - m lowercase
59 - 56 - semi-colon	110 - 1345 - n lowercase
60 - 126 - less-than sign	111 - 135 - o lowercase
61 - 123456 - equal	112 - 1234 - p lowercase
62 - 345 - more-than sign	113 - 12345 - q lowercase
63 - 1456 - question mark	114 - 1235 - r lowercase
64 - 47 - at commercial, at sign, at symbol	115 - 234 - s lowercase
65 - 17 - a uppercase	116 - 2345 - t lowercase
66 - 127 - b uppercase	117 - 136 - u lowercase
67 - 147 - c uppercase	118 - 1236 - v lowercase
68 - 1457 - d uppercase	119 - 2456 - w lowercase
69 - 157 - e uppercase	120 - 1346 - x lowercase
70 - 1247 - f uppercase	121 - 13456 - y lowercase
71 - 12457 - g uppercase	122 - 1356 - z lowercase
72 - 1257 - h uppercase	123 - 246 - left curly bracket
73 - 247 - i uppercase	124 - 1256 - vertical slash
74 - 2457 - j uppercase	125 - 12456 - right curly bracket
75 - 137 - k uppercase	126 - 45 - tilde
76 - 1237 - l uppercase	127 - 4567 - undo character
77 - 1347 - m uppercase	128 - 48 - euro
78 - 13457 - n uppercase	129 - 18 - not used
79 - 1357 - o uppercase	130 - 128 - single low quote
80 - 12347 - p uppercase	131 - 148 - f lowercase with a hook
81 - 123457 - q uppercase	132 - 1458 - double low quote
82 - 12357 - r uppercase	133 - 158 - ellipsis
83 - 2347 - s uppercase	134 - 1248 - dagger
84 - 23457 - t uppercase	135 - 12458 - double dagger

136 - 158 - modifier letter circumflex accent	185 - 18 - subscript one
137 - 1248 - per thousand	186 - 2458 - masculine ordinal indicator
138 - 12458 - s hatchek	187 - 2345678 - left quote
139 - 1258 - left single quote	188 - 1368 - a quarter
140 - 248 - oe uppercase	189 - 12368 - a half
141 - 2458 - not used	190 - 13468 - three quarter
142 - 138 - z uppercase with caron	191 - 38 - inverted question mark
143 - 1238 - not used	192 - 23678 - a grave accent uppercase
144 - 1348 - not used	193 - 28 - a acute accent uppercase
145 - 13458 - right quote	194 - 167 - a circumflex accent uppercase
146 - 1358 - single quote	195 - 3467 - a tilde uppercase
147 - 2348 - right double quote	196 - 567 - a diaeresis uppercase
148 - 23458 - double quote	197 - 34567 - a with ring above uppercase
149 - 1368 - bullet point	198 - 3457 - ae uppercase
150 - 12368 - en dash	199 - 123467 - c cedilla uppercase
151 - 24568 - em dash	200 - 3578 - e grave accent uppercase
152 - 13468 - small tilde	201 - 238 - e acute accent uppercase
153 - 134568 - registered trademark symbol	202 - 1267 - e circumflex accent uppercase
154 - 13568 - s lowercase with caron	203 - 2358 - e diaeresis uppercase
155 - 2468 - single right quote	204 - 57 - i grave accent uppercase
156 - 12568 - oe lowercase	205 - 258 - i acute accent uppercase
157 - 124568 - not used	206 - 1467 - i circumflex accent uppercase
158 - 458 - z lowercase with caron	207 - 23568 - i diaeresis uppercase
159 - 4568 - y uppercase diaeresis	208 - 3567 - eth uppercase
160 - - indivisible space	209 - 2567 - n tilde uppercase
161 - 367 - Inverted exclamation mark	210 - 578 - o grave accent uppercase
162 - 58 - cent	211 - 2568 - o acute accent uppercase
163 - 467 - pound	212 - 14567 - o circumflex accent uppercase
164 - 4678 - currency symbol	213 - 267 - o tilde uppercase
165 - 468 - yen	214 - 358 - o diaeresis uppercase
166 - 1578 - broken vertical bar	215 - - multiplication sign
167 - 357 - section sign	216 - 2467 - o with stroke uppercase
168 - 48 - diaeresis	217 - 35678 - u grave accent uppercase
169 - 123468 - copyright	218 - 268 - u acute accent uppercase
170 - 1258 - feminine ordinal indicator	219 - 1567 - u circumflex accent uppercase
171 - 1235678 - left quote	220 - 2368 - u diaeresis uppercase
172 - 125678 - not sign	221 - 3568 - y acute accent uppercase
173 - 368 - soft hyphen	222 - 2357 - letter thorn uppercase
174 - 12358 - registered trademark	223 - 34568 - sharp s, german eszett
175 - 458 - macron letter	224 - 123568 - a grave accent lowercase
176 - 4568 - degree	225 - 168 - a acute accent lowercase
177 - 23578 - plus minus sign	226 - 1678 - a circumflex accent lowercase
178 - 128 - subscript two	227 - 34678 - a tilde lowercase
179 - 148 - subscript three	228 - 3458 - a diaeresis lowercase
180 - 568 - diacritical mark uppercase	229 - 345678 - a with ring above lowercase
181 - 1348 - micro- prefix μ	230 - 34578 - ae lowercase
182 - 1458 - pilcrow	
183 - 37 - middle dot	
184 - 68 - cedilla	

231 - 1234678 - c cedilla lowercase
232 - 23468 - e grave accent lowercase
233 - 1268 - e acute accent lowercase
234 - 12678 - e circumflex accent
lowercase
235 - 12468 - e diaeresis lowercase
236 - 348 - i grave lowercase
237 - 1468 - i acute lowercase
238 - 14678 - i circumflex lowercase
239 - 124568 - i diaeresis lowercase
240 - 23458 - eth lowercase
241 - 13458 - n tilde lowercase
242 - 3468 - o grave lowercase
243 - 14568 - o acute lowercase

244 - 145678 - o circumflex lowercase
245 - 1358 - o tilde lowercase
246 - 2468 - o diaeresis lowercase
247 - - division sign
248 - 24678 - o with stroke lowercase
249 - 234568 - u grave lowercase
250 - 1568 - u acute lowercase
251 - 15678 - u circumflex lowercase
252 - 12568 - u diaeresis lowercase
253 - 24568 - y acute accent lowercase
254 - 12348 - thorn lowercase
255 - 134568 - y diaeresis lowercase

APPENDIX - 10 dots braille functions

- These combinations are used to generate all keys of a PC keyboard, other than the characters. They are also called bramigraphs. Graph means that the braille dots used to generate any keyboard action, usually have a graphical logic to have a better understanding.

Examples :

- The “Home” function, that is used to go to the beginning of the line in the editing zone, or at the beginning of a list, can be done by using combination b123A, (dots 1 2 3 at the same time as Space button). Its symmetrical function, end, that is used to go to the end of a line in the editing zone, or at the end of a list, can be done by using symmetrical braille dots, using space as b456A (dots 4 5 6 at the same time as Space button).
- The 4 arrow keys can also be generated with 10 dots braille functions. Even though they can be used with the right keypad, it is more convenient to generate them this way with successive shortcuts. You can notice that the 4 arrow keys always use the A key (space), combined with one of the 4 dots of the letter “w” in braille (b2456). The up arrow key will use the top dot of “w”, so you will type b4A ; the down arrow key will use the left dot of “w”, you will type b2A ; and the right arrow key will be b5A.
- The functions from F1 to F12 will be generated when using the first 12 letters of the alphabet in combination with braille key 9, for example b19 for F1 up to b1239 for F12.

Detailed list:

EDITION :

9 - Correction

A - Space

9A - Enter

35A – Insert key (used as a switch => 2 clicks to simulate a press and release)

36A - Erasure

NAVIGATION :

123A - Home

456A - End

2A - Left

5A - Right

4A - Up

6A - Down

13A – Previous page

46A – Next page

OTHERS:

1245A - Escape

256A - Tab

235A - Shift_Tab

1346A – Screen print

12A – Pause / Break

14A or 569 – Contextual menu

Functions

19 - F1

129 - F2

149 - F3

1459 - F4

159 - F5

1249 - F6

12459 - F7

1259 - F8

249 - F9

2459 - F10

139 - F11

1239 - F12

SWITCH:

2456A or 12349 - Start menu Windows

79 - Shift locked (Caps lock from PC keyboard)

89 - Shift unlocked (Caps unlock from PC keyboard)

39 – Locking numerical keypad

69 - Unlocking numerical keypad

7A - Shift

78A - Ctrl

178A - Ctrl locked

478A - Ctrl unlocked

8A - Alt

18A - Alt locked

48A - Alt unlocked

Other combinaisons

135A Ins locked

345A Ins unlocked

APPENDIX - Applications updates

1. Transfer the ".update" file with Bluetooth file transfer function (see APPENDIX - Bluetooth file transfer).
2. In the file explorer of *b.note*, press the down key from the left keypad to enter a menu and activate "go to" and then "bluetooth" to display the content of this directory. Take action on the .update file you need to install.
3. A dialogue box confirmation is displayed, if approved an update will be carried out and it will restart.
4. After restart, you can erase the .update file that is no longer useful.